

FOX S.r.l. Via Romagna, 6 - 20090 OPERA (MI) - ITALY Tel. +39.02.57600033 - 6543 - Fax +39.02.57600176 www.fox.it - fox@foxsrl.com



L1 relè

L2 relè

T2

L3 relè 3

14 relè 4


2

Τ1

SETTING PROCEDURE ED5 WITH RELAY'

TO FOLLOW POINT FOR POINT RELAY SETTING

- > 1 > to press T3 and to feed the tool
- > 2 > to press T2 up to visualize L1 (relay 1)
- 3 > to press T3 to visualize" relay"
- 4 > to press T2 to visualize" tyPE"
- > 5 > to press T3 to visualize __ [] -- (open)
- 6 > to press T1 to change the state: -- [] __ (closed) or to confirm with T4

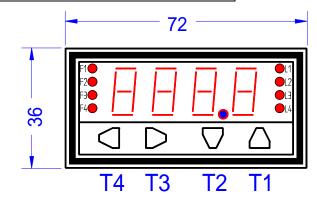

Т3


F2 set

Τ4

- * To select the other relays to leave again from the point 1 and to repeat the operations for L2. L3. L4, if you wont to connect the other relays
- > 7 > to finish pressing T1 to visualize S.UP with the channel turned on F2 and to remove tension
- 8 > to feed the tool and progress with the SETTING INTERVENTION POINT

SETTING INTERVENTION POINT

- T3 > T3 entry intervention point (P1H)
- > T1 or T2 to choose value
- > T3 confirms value (P1H)
- > T3 entry (P1L)
- > T1 or T2 to choose value
- > T3 confirms value (P1L)
- * to continue as above for the other levels (L2-L3-L4)
- to finish and to go out to press T4 > T4

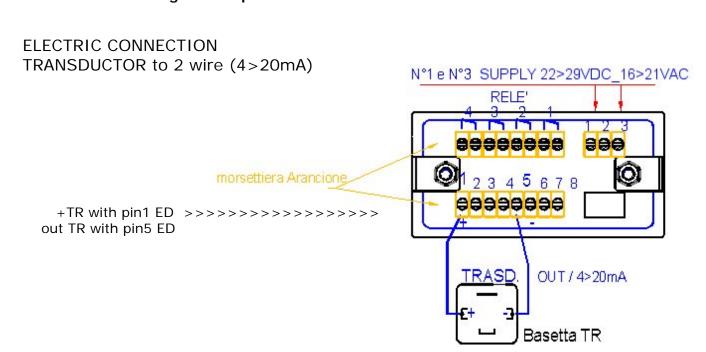

File: ED5relè SettaggioUK